

# Instruction Manual

## 1、 Installation Reminder

Secure the safe before use. The mounting bolts are included.

Modify the master code.

Don't put mechanical emergency key in the safe

## 2、 Main features

Usage: Storing the laptop and other valuables.

Operation : Micro-motor engine, with digital code operating system.

Locking System: Use 3-6 digit personal code or/and 6 digit master code to lock/unlock.

Safety: Entering 3 times wrong code will temporary shutdown the system for 15 minutes.

Panel shows "Holds 15" .

## 3、 Open and close the safe

<1> Close by personal code

Input any 3 ~6 digit code then press the "#/LOCK" key, "CLOSED" display, and the safe is locked.

<2> Open by personal code

Input your 3~6 digit code then "OPENED" display, the safe is unlocked.

<3> Open by master code

Input Master code (Default Master code is " 000000" ), "OPENED" display, the safe is unlocked.

## 4、 Master code modification

Make sure that the safe is unlocked, the operation is as following:

Double press "\* /Clear" quickly, it will display "PROG", enter the master code (Default master code is "000000"), display "NEU", enter 6 new master code, display "AGAIN", repeat the new master password, display " DONE", the master code is changed.

## 5、 Time set

Double press "\* /Clear " quickly, it will display "PROG" , enter "895100" , it shows the first 6 digit information, ignore it and continue to press "#/Lock" . When the next 6-digit information is displayed, it means "year, month, day", input the local time, press "#/Lock" to continue, when the third 6-digit information is displayed, it means "hour, minute, second", input the local time, Press "#/Lock" to set the time completely.

## 6、 Power and Batteries

Open the door, use a screwdriver to open the battery cover on the back of the door, and install 4 batteries (pay attention to the up and down direction)

Press "#/Lock" once with the door closed to perform a battery test. "BA-H1" means the battery is sufficient; BA-L means the battery is insufficient, please replace the battery as soon as possible.

### Attention:

<1> Press "\* /Clear" to cancel when the code is wrongly input.

<2> Enter the 3 times wrong code the system will temporary shutdown for 15 minutes

### Emergency mechanical key guide:

Open the black hole under the panel, insert the mechanical key and turn it clockwise, the door opens, and "OPENED" is displayed at the same time, enter a new personal password, press "#/Lock", close the door, and remove the key.