



# Programming

## ScanLogic Basic

### A. Open lock

- 1) Enter default Manager code 123456

### B. Change Code

- 1) Enter 000000
- 2) Enter existing code, 1 beep
- 3) Enter new 6 digit code, 1 beep
- 4) Repeat new 6 digit code, 2 beeps

\*Manager code of 123456 must be changed before any other Users can be added

\*\*Reset Code must be changed from default

\*\*\*1 long beep means code is not allowed

### C. Add Manager fingerprint(s)

- 1) Open with Manager code/fingerprint
- 2) Hold "+," and hold until 1 beep
- 3) Place fingerprint 4X, 1 beep each
- 4) 2 beeps confirms fingerprint addition

\*Manager can add up to 5 fingerprints

### D. Add User1 Code

- 1) Open with Manager code/fingerprint
- 2) Hold "1," 1 beep
- 3) Enter new 6 digit code, 1 beep
- 4) Repeat new 6 digit code, 2 beeps

### E. Add User2 Code

- 1) Open with User1 code/fingerprint
- 2) Hold "1," 1 beep
- 3) Enter new 6 digit code, 1 beep
- 4) Repeat new 6 digit code, 2 beeps

### F. Add fingerprints

- 1) Open with own code/fingerprint
- 2) Hold "+," 1 beep
- 3) Place fingerprint 4X, 1 beep each
- 4) 2 beeps confirms fingerprint addition

\*User1 and User2 can add up to 5 fingerprints

### G. Delete own fingerprints (All)

- 1) Open with your own code/fingerprint
- 2) Hold "-," 1 beep, then 2 beeps

\*All of your fingerprints have been deleted

### H. Delete User2 (Code & fingerprints)

- 1) Open with User1 code/fingerprint
- 2) Hold "3", 2 beeps

\*User2 code and fingerprints are deleted

### I. Delete All (Codes/fingerprints)

- 1) Open with manager code/fingerprint
- 2) Hold "3", 2 beeps

\*All users are deleted.

\*\*Manager code does not revert to 123456.

### J. Reset (resets codes to factory default)

- 1) Input reset code, default is 999999
- 2) Hold "6", 1 beep, then 2 beeps

\*Lock is in default mode, Manager code reverts to 123456

\*\*Reset code does not reset to factory default code.

### K. Turn beeper off

- 1) Open with Manager or User1 code/fingerprint
- 2) Hold "4," 1 beep

### L. Turn beeper on

- 1) Open with Manager or User1 code/fingerprint
- 2) Hold "4," 2 beeps

### Security Levels:

Security Level 1 = Fingerprint or code

Security Level 2 = Fingerprint and code

### M. Change to Security Level 2 (fingerprint **and** code)

- 1) Open with Manager or User1 code/fingerprint
- 2) Hold "5," 1 beep, then 2 beeps

### N. Change to Security Level 1 (fingerprint **or** code)

- 1) Open with Manager or User1 code **and** fingerprint
- 2) Hold "5," 1 beep, then 1 beep

### O. Wrong Entry Penalty (Penalty Time)

Entry of four (4) consecutive invalid codes results in a 5-minute penalty time period

- 1) The unit beeps at 5 second intervals indicating that it is still in the penalty time period
- 2) While the system is in penalty time, the EntryPad buttons remain unresponsive
- 3) While the system is in penalty time, removal of the batteries will interrupt the penalty time countdown. Upon reinstallation of the batteries, the EntryPad continues to count down until the 5 minute penalty time period expires
- 4) End of lockout/penalty time - 1 long and 2 short beeps

***Replace the battery in –II series entrypad.***

One 9V alkaline battery is installed in the compartment in the bottom of the –II series entrypad. To replace the battery, pull out the battery compartment first. Follow these steps:

I Release the latch of the battery compartment until it comes to the end, See Fig. 2.

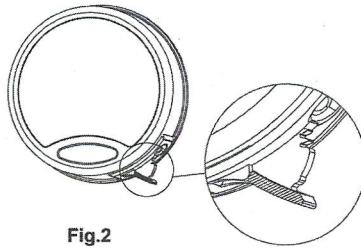


Fig.2

II Pull out the battery compartment from the bottom of the entrypad, See Fig. 3.

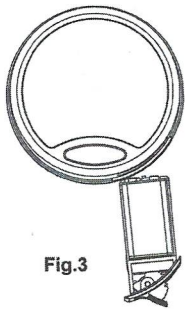


Fig.3

Take out the battery and replace with a new one. Make sure connect the new battery correctly about the positive and negative poles. See Fig.4.

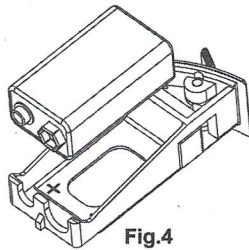


Fig.4

III Put the battery compartment back into the entrypad. Push it up until it is in line with or level with the cover. Pull up the latch of the battery compartment until it is tight and secure too. See Fig. 1.

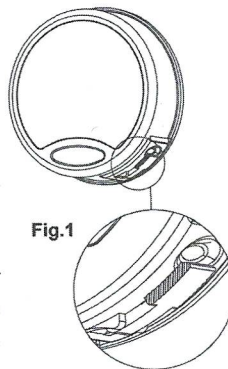


Fig.1